

Product User Guide

PR2000



PR2000
Pressure Data Logger with LCD

Table of Contents

Quick Start Steps	3
Product Overview	4
Software Installation	5
Device Operation.....	5
Computer Interface	6
Wall Mounting.....	6
Front Panel Overview.....	7
Screen Descriptions	8-9
Maintenance	10
General Specifications.....	11


Quick Start Steps

1. Install the MadgeTech 4 Software and USB Drivers onto a Windows PC.
2. Wire the data logger with the desired probes.
3. Connect the data logger to the Windows PC with the IFC200 (sold separately).
4. Launch the MadgeTech 4 Software. The pHTemp2000 will appear in the Connected Devices window indicating the device has been recognized.
5. Select the start method, reading rate and any other parameters appropriate for the desired data logging application. Once configured, click the **Start** icon and deploy the data logger
6. To download data, connect the data logger to the windows PC with the IFC200, select the device in the list, click the **Stop** icon, and then click the **Download** icon. A graph will automatically display the data.

Product Overview

The PR2000 is a pressure data logger with LCD display. The device features an IP rating of 65, which means it is dust proof, and splash proof making it available to be used outdoors. The convenient LCD provides access to the current pressure reading, as well as minimum, maximum and average statistics. A trending graph is also displayed of the last 100 readings.

Display Overview

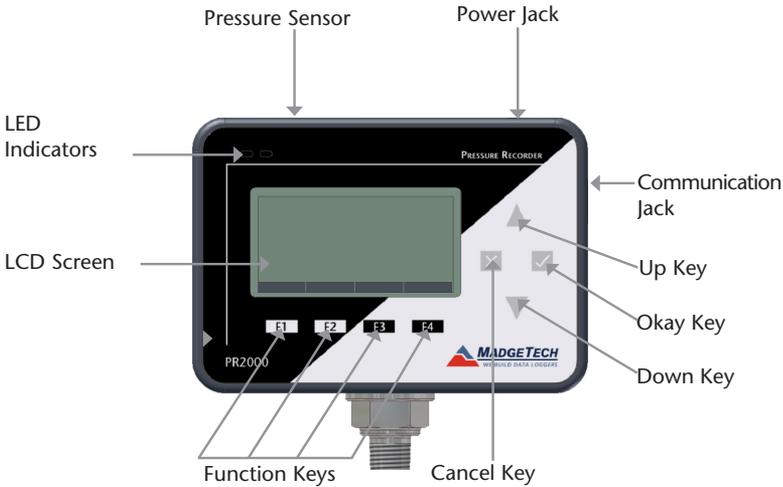

Status Indicators



Battery Power (Full, Half-full, Empty)



Memory Remaining (Empty, Half-full, Full)



Device is running



Device is stopped



Delay Start



Wait Icon (device is busy)



Device reset has occurred



External power present

Device Operation

Connecting and Starting the data logger


- Once the software is installed and running, plug the interface cable into the data logger.
- Connect the USB end of the interface cable into an open USB port on the computer.
- The device will appear in the Connected Devices list, highlight the desired data logger.
- For most applications, select **“Custom Start”** from the menu bar and choose the desired start method, reading rate and other parameters appropriate for the data logging application and click **“Start”**. (*“Quick Start” applies the most recent custom start options, “Batch Start” is used for managing multiple loggers at once, “Real Time Start” stores the dataset as it records while connected to the logger.*)
- The status of the device will change to **“Running”**, **“Waiting to Start”** or **“Waiting to Manual Start”**, depending upon your start method.
- Disconnect the data logger from the interface cable and place it in the environment to measure.

Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.

Downloading data from a data logger

- Connect the logger to the interface cable.
- Highlight the data logger in the Connected Devices list. Click **“Stop”** on the menu bar.
- Once the data logger is stopped, with the logger highlighted, click **“Download”**. You will be prompted to name your report.
- Downloading will offload and save all the recorded data to the PC


Computer Interface

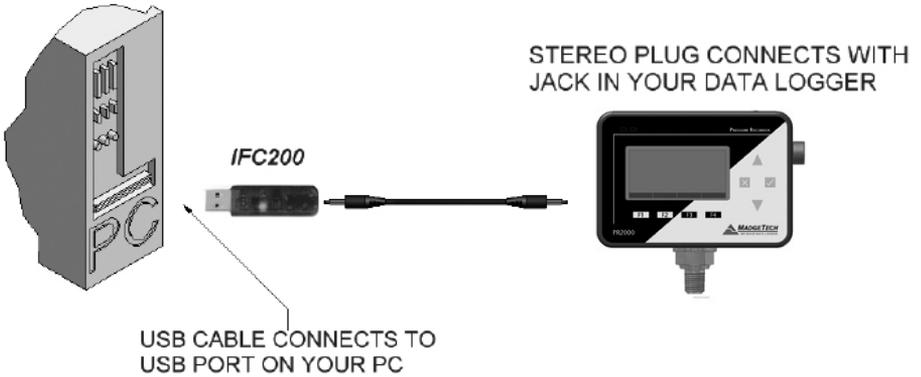

Fully insert the male connector of the IFC200 interface cable into the female receptacle of the data logger. Fully insert the female USB connector into the USB. *(Please see the Data Logger Software manual for further information.)*

***WARNING:** *Install driver before connecting a device using a USB for the first time. See the Software manual for further information.*

Wall Mounting

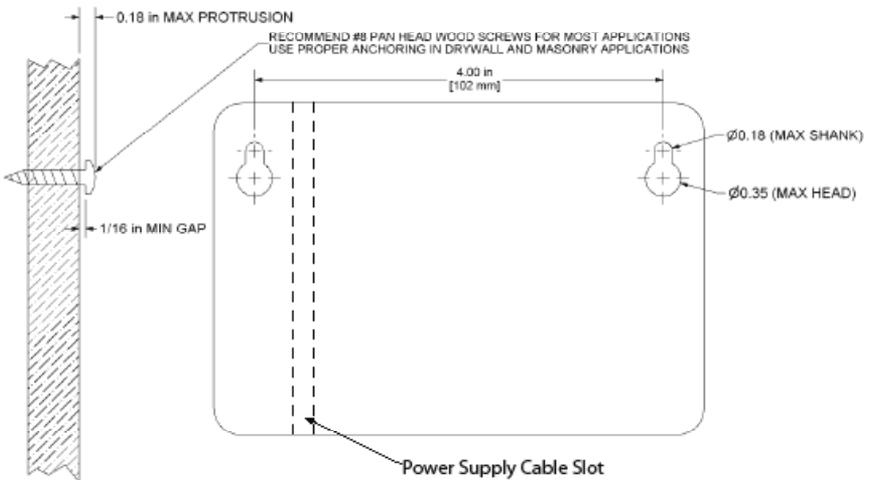

Front Panel Overview

Changing the display units

The PR2000 comes with factory default display units of PSI for pressure and the real-time pressure graphing feature. These units can be easily changed by pressing the F3 button in the main screen and then selecting F1 for pressure or F2 for the pressure graph. After selecting the channel, the available units can be scrolled through by either pressing the channel's function key repeatedly or using the UP and DOWN keys

Button pressing chain: Main Screen -> F3 -> F1 (pressure) or F2 (pressure graph) -> function key repeatedly or UP and DOWN

Checking the memory status

A status icon appears on all screens representing memory, but further information including percent memory left and number of readings taken can also be viewed. From the Main Screen press the F1 key to enter the Status screens then press F2 to view memory status information.

Button pressing chain: Main Screen -> F1 -> F2

Checking power status

A battery status and external power status (if available) icon appear on all screens, but percent battery power remaining and external power presence as well as battery type, current battery voltage, and current external voltage can also be viewed. From the Main Screen press F4 to view the Device Configuration Menu, F2 to access the power options, then F4 twice to view the Power Status screen, including battery power percent remaining and the presence of external power. Battery type and battery voltage are also displayed, as well as external power voltage (if connected).

Button pressing chain: Main Screen -> F4 -> F2 -> F4 -> F4

Changing the Contrast


The PR2000's LCD screen contrast values can be changed in two ways. One method is outlined in the Function Reference Guide. A faster, simpler way involves simultaneously pressing the CANCEL and UP or DOWN button in any screen.

Button pressing chain: CANCEL + UP (to increase) or DOWN (to decrease)

Screen Descriptions

Main Screen

Displays last measured values

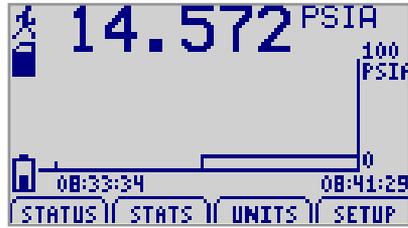

Status Screens



Run Parameters




Memory Status



Date and Time

Statistics

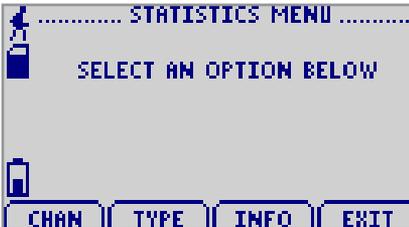

Statistics Menu Screen: *Displays options available within the statistics menu*



Channel Statistics: *Displays statistics*



Type Statistics: *Displays statistics from the pressure channel*



Statistics Information Screen: *Displays current statistics information*

Device Configuration Menu

Displays options available within the device configuration menu



- F1 = DISPLAY: enters Adjust Visibility screen
- F2 = POWER: enters Power Modes screen
- F3 = INFO: goes to Device Information screens
- F4 = EXIT: returns to main screen

- CANCEL = returns to main screen
- OK = returns to main screen
- UP = no function
- Down = no function

Device Reset

This device include two reset options, Hardware and Power Interruption



Power Interruption: *Displayed as notification when power is interrupted during device operation.*

- F1 = OK: accepts notification and displays main screen
- F2 = no function
- F3 = no function
- F4 = no function
- CANCEL = no function
- OK = accepts notification and displays main screen
- UP = no function
- DOWN = no function

Hardware Reset: *Displayed as notification when a hardware reset has occurred.*

- F1 = OK: accepts notification and displays main screen
- F2 = no function
- F3 = no function
- F4 = no function
- CANCEL = no function
- OK = accepts notification and displays main screen
- UP = no function
- DOWN = no function

Device Maintenance

Battery Information



BATTERY WARNING

This data logger contains a lithium battery. Do not cut the battery open, incinerate, or recharge. Do not heat lithium batteries above the specified operating temperature.* Dispose of the battery in accordance with local regulations.

*See the individual specification sheets at www.madgetech.com.

Battery Replacement

This product does not have any user-serviceable parts except the battery which should be replaced periodically. The battery life is affected by battery type, ambient temperature, sample rate, sensor selection, off-loads and LCD usage. The device has a battery status indicator on the LCD. If the battery indication is low, or if the device seems to be inoperable, it is recommended that the battery be replaced.

Materials: 3/32" HEX Driver (Allen Key) and a Replacement Battery (U9VL-J)

- Remove the back cover from the device by unscrewing the four screws.
- Remove the battery from its compartment and unsnap it from the connector.
- Snap the new battery into the terminals and verify it is secure.
- Replace the cover taking care not to pinch the wires. Screw the enclosure back together.

Note: Be sure not to over tighten the screws or strip the threads.

General Specifications

Part Number	PR2000
Pressure Sensor	Semiconductor
Pressure Range	*See Table for Details
Pressure Resolution	
Pressure Accuracy	
Memory	262,143
Reading Rate	1 reading every 2 seconds up to 1 reading every 24 hours
Required Interface Package	IFC200 (Recommended) or IFC110
Baud Rate	115,200
Typical Battery Life	1 year battery life at 1 minute reading rate with display off, 30 days typical with continuous display use.
Operating Environment	-20 °C to +60 °C (-4 °F to +140 °F), 0 %RH to 95 %RH (non-condensing)
Material	Black anodized aluminum and 303 stainless steel NPT process connection
Dimensions	5.1 in x 4.8 in x 1.78 in (130 mm x 122 mm x 45 mm)
Approvals	CE

* PR2000 Pressure Range, Resolution and Accuracy

Range (PSI)	0- 30	0- 100	0- 300	0- 500	0- 1000	0- 5000
Resolution	2% FSR, 0.25% @ 25 °C typical					
Accuracy (PSI)	0.002	0.005	0.02	0.05	0.05	0.2